

OPERATING INSTRUCTIONS

Signaller Display Unit

(Portable Suitcase)

This display unit is designed to present and demonstrate the Signaller Multi function Command Unit.

The display unit includes:
RB6 K, RB6 RF, the 6 button keypad and the 5 button RF remote control keypad, a battery and a battery charger.

To operate the display unit, turn the power switch ON. After a 3 second delay a beep will be heard and the back light will illuminate to indicate that Signaller is functional and ready to use.

To demonstrate the Signaller 6 button keypad, and the Signaller 5 button RF Remote, please refer to the Operating Instructions included in your info pack, and downloadable from www.rb-sys.com.



Notes:

- The Display Unit works on a 12V rechargeable battery. Therefore make sure to switch the power OFF when not in use.
- To charge the battery use the 12V DC charger supplied.
- In the event of you activating the RB6 K keyboard and the RB6 RF Remote at the same time, an electrical collision can occur. In this case turn the power OFF for 10 seconds then switch back ON.
- This Display Unit's RB6 RF remote does not support the Rear Wiper; and the automatic 20 second indicator cancellation functions. However, those functions DO WORK once Signaller is installed into a vehicle.