

OPERATING INSTRUCTIONS

6 Buttons Keypad

Congratulations. Your vehicle now has *Signaller* installed. The keypad is designed to be easily activated by using only the one finger or thumb.

Signaller has the capacity for up to 6 different functions: Turn (R/L) signals, Horn, Lights (high/low beam), Front Window Wipers, and Rear Wiper, without conflicting with or overriding the vehicle's existing controls.



Like the existing electrical functions, *Signaller* will only operate when the ignition is turned on. Instructions for each function are as follows:

Turn signal (R/L)

Simply press the indicator button for the desired direction of turn.

The turning indicators once activated will flash for 20 seconds before automatically turning off. By clicking on the indicator button any time during the 20 seconds, however, will deactivate the turning signal immediately.

Once de-activated, a beep will be heard and the indicator button will cease illumination.

Note: Clicking on the alternate indicator button while the indicator is active will automatically switch the signal to that direction. Also, moving the cars standard indicating arm will over-ride Signaller.



Horn

The Horn will continue to sound while the Horn button is engaged.

When the button is released, the buttons illumination will cease and the horn will stop.



Front wipers

Simply press the wiper button. The wipers will start working at normal speed.

By clicking a second time, another beep will be heard, the wipers will cease operating, and the button's illumination will cease.



Rear wiper

Clicking on the Asterix button will engage the rear wiper. A Second click will make a beep, the rear wiper will stop and the button's illumination will cease.



Lights

High Beam Flash (when lights are off)

If the vehicles main light switch is OFF: A short press (less than 2 seconds) on the Lights Button will cause a momentarily High Beam Flash.

[Note: Some vehicles electrical configurations do not allow *Signaller* to function when their main light switch is OFF.]

High Beam Flash (lights on) -when vehicle light switch is ON and set at LOW Beam: A short press on the lights button will flash HIGH Beam (without remaining on) then return to Low Beam.

High Beam:

Turn the Vehicles standard lighting switch to activate LOW Beam.

Press and hold the *lights* button for minimum of 2 seconds. After 2 seconds there will be a second beep sound and High Beam will be automatically activated and remain ON.

Pressing the button again will turn the High Beam OFF, returning to the original setting of Low Beam.

