

OPERATING INSTRUCTIONS

Signaller Display Unit (Wall Mount)

This display unit is designed to present and demonstrate the Signaller Multi function Command Unit for vehicles.

The display unit includes:

RB6 K, RB6 RF, the 6 button keypad and the 5 button RF remote control keypad, and an outlet power supply adaptor.

To operate the display unit, simply plug in the power supply. After a 3 second delay a beep will be heard and the back light will illuminate to indicate that Signaller is functional and ready to use.



To demonstrate the Signaller 6 button keypad, and the Signaller 5 button RF Remote, please refer to the Operating Instructions included in your info pack, and downloadable from www.rb-sys.com.

Notes:

- The Display Unit operates on 12V power supply, which is why an adaptor plug is supplied to convert the 240V mains supply. It can remain on constantly with no need to turn off when not in use.
- In the event of you activating the RB6 K keyboard and the RB6 RF Remote at the same time, an electrical collision can sometimes occur. In this event, press the * button for more than 6 seconds. After 6 seconds there will be a second beep sound, the button's illumination will cease, and the Signaller will RESET automatically. Alternatively, turn off the power supply for 10 seconds before turning back on.
- This Display Unit's RB6 RF remote does not support the Rear Wiper; and the automatic 20 second indicator cancellation functions. However, those functions DO WORK once Signaller is installed into a vehicle.